

# AE 45/ 47

系列	型號	噴油塞子	連接方式及 輪轂 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AE45C	13606P	short	H32		↻	⇐		7 - 14	1.1
AE45C	13706M	short	H32		↻	⇐		7 - 14	1.1
AE47A	13846P	short	H32	↻			⇒	7 - 14	1.1
AE47B	13666P	short	H32	↻		⇐		7 - 14	1.1
AE47B	72674P	short	H54	↻		⇐		7 - 14	1.1
AE47C	13866P	short	H32		↻	⇐		2 - 12	1.1
AE47C	13876P	short	H32		↻	⇐		7 - 14	1.1
AE47C	13936M	long	H32		↻	⇐		0.5 - 3	1.1
AE47C	73684P	short	H32		↻	⇐		5 - 12	1.1
AE47D	13786M	short	H32		↻		⇒	7 - 14	1.1
AE47D	13856P	short	H32		↻		⇒	5 - 20	1.1

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向

# AE 57 / 67 / 77

系列	型號	噴油塞子	連接方式及 輪殼 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AE57B	13646M	short	H32	↻		←		10 - 20	1.1
AE57BK	72114P □	short	H54	↻		←		8 - 15	1.1
AE57C	73734P	short	H32		↻	←		8 - 28	1.1
AE57D	13566P	short	H32		↻		⇒	2 - 12	1.1
AE67C	73214M	short	H32		↻	←		0.5 - 3	1.4
AE67C	73614P	short	H32		↻	←		8 - 28	1.4
AE67D	72784P	short	F54		↻		⇒	7 - 14	1.4
AE77C	72702P	long	F54		↻	←		10 - 28	1.4
AE77C	73802P	short	H32		↻	←		10 - 20	1.4
AE97C	72963P	long	F54		↻	←		8 - 28	1.7
AE97C	73902P	long	H32		↻	←		0.5 - 3	1.7
AE97D	73552P	short	H32		↻		⇒	2 - 12	1.7

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ← 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向