

AS 47

系列	型號	噴油塞子	連接方式及 輪載 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AS47A	15366P0500	short	H32	↻			⇒	7 - 14	1.1
AS47A	16196P0200	short	H32	↻			⇒	7 - 14	1
AS47A	74324P0500	long	F54	↻			⇒	7 - 14	1.4
AS47A	74364P0500	short	H54	↻			⇒	7 - 14	1.4
AS47A	75094P0500	long	H32	↻			⇒	7 - 16	1.1
AS47A	75924P0500	short	H32	↻			⇒	7 - 25	1.1
AS47AK	16026P0500	□	short	H32	↻		⇒	7 - 14	1.1
AS47AK	16126M0500	□	short	H32	↻		⇒	7 - 14	1.1
AS47AK	75644P0700	□	short	H32	↻		⇒	7 - 14	1.1
AS47B	15376P0500	short	H32	↻		⇐		7 - 14	1.1
AS47B	74454P0500	short	F54	↻		⇐		7 - 14	1.4
AS47BK	15516P0500	□	short	H32	↻	⇐		7 - 14	1.1
AS47C	15386P0500	short	H32		↻	⇐		7 - 14	1.1
AS47C	16046P0500	short	H32		↻	⇐		7 - 25	1.1
AS47C	16206P0100	short	H32		↻	⇐		7 - 14	1.1
AS47C	16216P0260	short	H32		↻	⇐		7 - 14	1.1
AS47C	74344P0500	long	F54		↻	⇐		7 - 14	1.4
AS47C	74384P0500	short	H54		↻	⇐		7 - 14	1.4
AS47C	74614P0500	long	F54		↻	⇐		10 - 20	1.4
AS47CK	15546P0500	□	short	H32		↻	⇐	7 - 14	1.1
AS47CK	15826P0500	□	short	H32		↻	⇐	7 - 14	1.1
AS47D	15396P0500	short	H32		↻		⇒	7 - 14	1.1
AS47D	15506P0500	short	H32		↻		⇒	7 - 25	1.1
AS47D	15576P0500	short	H32		↻		⇒	7 - 25	1.1
AS47D	16226P0260	short	H32		↻		⇒	7 - 14	1.1
AS47D	74354P0500	long	F54		↻		⇒	7 - 14	1.4
AS47D	74394P0500	short	H54		↻		⇒	7 - 14	1.4
AS47DK	15626P0500	short	H32		↻		⇒	7 - 14	1.1

從軸承末端觀看

- * 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向

AS 57 / 67

系列	型號	噴油塞子	連接方式及 輪殼 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AS57A	16066P0500	short	H32	↻			⇒	7 - 14	1.1
AS57A	75914P0500	short	H32	↻			⇒	7 - 14	1.1
AS57B	15856P0500	short	H32	↻		⇐		7 - 14	1.1
AS57B	74424P0500	long	F54	↻		⇐		7 - 14	1.4
AS57C	15446P0500	short	H32		↻	⇐		7 - 14	1.1
AS57C	74414P0500	long	F54		↻	⇐		7 - 14	1.4
AS57CK	15836P0500	short	H32		↻	⇐		7 - 14	1.1
AS57DK	16176P0500	short	H32		↻		⇒	7 - 14	1.1
AS67A	74634P0500	short	F54	↻			⇒	10 - 15	1.4
AS67A	74664P0500	long	F54	↻			⇒	10 - 15	1.4
AS67B	15756P0500	short	H32	↻		⇐		10 - 15	1.1
AS67B	74494P0500	long	F54	↻		⇐		10 - 15	1.4
AS67C	15706P0500	short	H32		↻	⇐		10 - 15	1.1
AS67C	74564P0500	long	F54		↻	⇐		10 - 15	1.4
AS67CK	74466P0500	short	H54		↻	⇐		10 - 14	1.1

從軸承末端觀看

- * 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向