

系 列	型 號	噴油塞子	連接方式及 輪轂 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AN47A	13266P	short	H32	↻			⇒	7 - 14	1.1
AN47A	72164P	long	F54	↻			⇒	7 - 14	1.4
AN47A	72264P	short	H54	↻			⇒	7 - 14	1.4
AN47A	73264P	short	H32	↻			⇒	7 - 14	1.1
AN47A	73444P	short	H32	↻			⇒	20 - 28	1.1
AN47B	13956P	short	H32	↻		⇐		10 - 20	1.1
AN47B	72174P	long	F54	↻		⇐		7 - 14	1.4
AN47B	73274P	short	H32	↻		⇐		7 - 14	1.1
AN47BK	72274P	short	H54	↻		⇐		7 - 14	1.4
AN47C	13426P	short	H32		↻	⇐		7 - 14	1.1
AN47C	72184P	long	F54		↻	⇐		7 - 14	1.4
AN47C	72284P	short	H54		↻	⇐		7 - 14	1.4
AN47C	73284P	long	H32		↻	⇐		7 - 14	1.1
AN47C	73424P	short	H32		↻	⇐		7 - 14	1.1
AN47CK	72474M	long	F54		↻	⇐		7 - 14	1.4
AN47D	13396P	short	H32		↻		⇒	7 - 14	1.1
AN47D	72194P	long	F54		↻		⇒	7 - 14	1.4
AN47D	72294P	short	H54		↻		⇒	7 - 14	1.4
AN47DK	13116P	short	H32		↻		⇒	7 - 14	1.1
AN47DK	13594P	short	H32		↻		⇒	7 - 14	1.1
AN57A	72434P	long	F54	↻			⇒	7 - 14	1.4
AN57A	73514P	short	H32	↻			⇒	7 - 14	1.1
AN57B	13306P	short	H32	↻		⇐		10 - 20	1.1
AN57C	72824P	long	F54		↻	⇐		7 - 14	1.4
AN57C	73494P	short	H32		↻	⇐		7 - 14	1.1
AN57CK	13066P	short	H32		↻	⇐		7 - 14	1.1
AN57CK	13036P	short	H32		↻	⇐		7 - 14	1.1

從軸承末端觀看

- * 軸承轉向
 ⇒ 噴油出口設于右方
 ⇐ 噴油出口設于左方
 □ 適合煤油使用
 ↻ 順時針轉向
 ↺ 逆時針轉向

AN 67 / 77 / 97

系 列	型 號	噴油塞子	連接方式及 輪穀 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AN67A	72384P	long	F54	↻			⇒	10 - 20	1.4
AN67A	73454P	short	H32	↻			⇒	10 - 20	1.1
AN67B	13356P	short	H32	↻		⇐		10 - 20	1.1
AN67B	72514P	long	F54	↻		⇐		10 - 20	1.4
AN67B	72874P	short	H54	↻		⇐		10 - 20	1.4
AN67C	13366P	long	H32		↻	⇐		7 - 14	1.1
AN67C	72334P	long	F54		↻	⇐		10 - 20	1.4
AN67C	72424P	short	H54		↻	⇐		10 - 20	1.4
AN67CK	13386P	short	H32		↻	⇐		7 - 14	1.1
AN67D	72524P	long	F54		↻		⇒	10 - 20	1.4
AN67DK	13576P	short	H32		↻		⇒	7 - 14	1.1
AN77A	72552P	short	H54	↻			⇒	10 - 20	1.4
AN77A	72562P	short	F54	↻			⇒	10 - 20	1.4
AN77A	73462P	short	H32	↻			⇒	10 - 20	1.1
AN77C	72352P	long	F54		↻	⇐		10 - 20	1.4
AN77C	72752P	short	H54		↻	⇐		10 - 20	1.4
AN77C	73412P	short	H32		↻	⇐		10 - 20	1.1
AN97A	73912P	short	H32	↻			⇒	10 - 20	1.1
AN97C	72572P	long	F54		↻	⇐		10 - 20	1.4
AN97CK	13105P	short	H32		↻	⇐		7 - 14	1.1

從軸承末端觀看

- * 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向