

# AP 47 / 57 / 67

系列	型號	噴油塞子	連接方式及 輪轂 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AP47A	75554P0500	short	H32	☺			⇒	3 - 28	1.1
AP47B	75614P0500	short	H32	☺		⇐		3 - 28	1.1
AP47C	74604P0500	long	F54		☺	⇐		3 - 28	1.4
AP47C	75564P0500	short	H32		☺	⇐		3 - 28	1.1
AP57A	75494P0500	short	H32	☺			⇒	3 - 28	1.1
AP57B	15766P0500	short	H32	☺		⇐		3 - 28	1.1
AP57C	74434P0500	long	F54		☺	⇐		3 - 28	1.4
AP57C	75454P0500	short	H32		☺	⇐		3 - 28	1.1
AP67C	75594P0500	short	H32		☺	⇐		5 - 28	1.1

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- ☐ 適合煤油使用
- ☺ 順時針轉向
- ☹ 逆時針轉向