

# AT2

系列	型號	噴油塞子	連接方式及 輪殼 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AT2 45A	95474P0500		H32	↻			⇒	8 - 25	1.3
AT2 45BK	96014P0500	□	H32	↻		⇐		8 - 25	1.3
AT2 45C	95414P0500		H32		↻	⇐		8 - 25	1.3
AT2 45D	95444P0500		H32		↻		⇒	8 - 25	1.3
AT2 55B	95154P0500		H32	↻		⇐		8 - 25	1.3
AT2 55C	95494P0500		H32		↻	⇐		8 - 25	1.3
AT2 65A	95574P0500		H32	↻			⇒	8 - 25	1.3
AT2 65B	95874P0500		H32	↻		⇐		8 - 25	1.3
AT2 65C	95564P0500		H32		↻	⇐		8 - 25	1.3
AT2 75B	95912P0500		H32	↻		⇐		8 - 25	1.3
AT2 75C	95832P0500		H32		↻	⇐		8 - 25	1.3
AT2 95B	92922P0500		H32	↻		⇐		8 - 25	1.3
AT2 95C	95852P0500		H32		↻	⇐		2 - 25	1.3

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向

# AT3

系列	型號	噴油塞子	連接方式及 輪殼 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AT3 45A	95594P0500		H32	↻			⇒	8 - 25	1.3
AT3 45B	95754P0500		H32	↻		⇐		8 - 25	1.3
AT3 45C	95584P0500		H32		↻	⇐		8 - 25	1.3
AT3 45D	95464P0500		H32		↻		⇒	8 - 25	1.3
AT3 55A	95084P0500		H32	↻			⇒	8 - 25	1.3
AT3 55C	95504P0500		H32		↻	⇐		8 - 25	1.3
AT3 55D	95644P0500		H32		↻		⇒	8 - 25	1.3
AT3 65C	95614P0500		H32		↻	⇐		8 - 25	1.3
AT3 65D	95684P0500		H32		↻		⇒	8 - 25	1.3

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向