

# AJ4 / AJ6

系列	型號	噴油塞子	連接方式及 輪殼 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
AJ4	AJ4AC10004P		F54	↻			⇒	10 - 20	1.7
AJ4	AJ4CC10004P		F54		↻	⇐		10 - 20	1.7
AJ4	AJ4CE10024P		F54		↻	⇐		10 - 30	1.7
AJ4	AJ4DC10004P		F54		↻		⇒	10 - 20	1.7
AJ6	AJ6AC10004P		F54	↻			⇒	10 - 20	1.7
AJ6	AJ6AE10024P		F54	↻			⇒	10 - 30	1.7
AJ6	AJ6CC10004P		F54		↻	⇐		10 - 20	1.7
AJ6	AJ6CC10024P		F54		↻	⇐		10 - 20	1.7
AJ6	AJ6CC10034P		F54		↻	⇐		10 - 20	1.7
AJ6	AJ6CE10024P		F54		↻	⇐		10 - 30	1.7
AJ6	AJ6DC10004P		F54		↻		⇒	10 - 20	1.7
AJ6	AJ6DE10024P		F54		↻		⇒	10 - 30	1.7

從軸承末端觀看

- \* 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向