

J4 / J6 / J7

系列	型號	噴油塞子	連接方式及 輪穀 Ø (mm)	油泵轉向		噴油出口		壓力範圍	每只淨重 (kg)
J4	J4CAC10005P		F54	↻			⇒	10 - 21	3.6
J4	J4CBC10005P		F54	↻		⇐		10 - 21	3.6
J4	J4CCC10005P		F54		↻	⇐		10 - 21	3.6
J4	J4CDC10005P		F54		↻		⇒	10 - 21	3.6
J6	J6CAC10005P		F54	↻			⇒	10 - 21	3.6
J6	J6CAC10015P		F54	↻			⇒	10 - 21	3.8
J6	J6CAC10025P		F54	↻			⇒	10 - 21	3.8
J6	J6CBC10005P		F54	↻		⇐		10 - 21	3.6
J6	J6CCC10005P		F54		↻	⇐		10 - 21	3.6
J6	J6CCC10015P		F54		↻	⇐		10 - 21	3.8
J6	J6CCC10025P		F54		↻	⇐		10 - 21	3.8
J6	J6CDC10005P		F54		↻		⇒	10 - 21	3.6
J7	J7CAC10014P		F54	↻			⇒	10 - 21	3.8
J7	J7CCC10014P		F54		↻	⇐		10 - 21	3.8
J7	J7CCC10024P		F54		↻	⇐		10 - 21	3.8

從軸承末端觀看

- * 軸承轉向
- ⇒ 噴油出口設于右方
- ⇐ 噴油出口設于左方
- 適合煤油使用
- ↻ 順時針轉向
- ↺ 逆時針轉向